

## **MATLAB 2009 Command Prompt Example: Using mcl\_RS232\_USB\_To\_SPI\_64**

```
>> spi =  
NET.addAssembly('C:\WINDOWS\system32\mcl_RS232_USB_To_SPI_64.dll')
```

```
spi =
```

```
NET.Assembly handle  
Package: NET
```

Properties for class NET.Assembly:

```
AssemblyHandle  
Classes  
Structures  
Enums  
GenericTypes  
Interfaces  
Delegates
```

```
>> obj = mcl_RS232_USB_To_SPI_64.USB_To_SPI
```

```
obj =
```

```
mcl_RS232_USB_To_SPI_64.USB_To_SPI handle with no properties.  
Package: mcl_RS232_USB_To_SPI_64
```

Methods, Events, Superclasses

Methods for class mcl\_RS232\_USB\_To\_SPI\_64.USB\_To\_SPI:

Connect	GetType	Send_SPI	delete	gt
notify				
Disconnect	Get_Available_SN_List	Set_SPI_PulseWidth	eq	
isvalid				
Equals	Read_ModelName	ToString	findobj	le
GetHashCode	Read_SN	USB_To_SPI	findprop	lt
GetStatus	Read_SPI	addlistener	ge	ne

```
>> obj.Connect
```

```
ans =
```

```
>> obj.Send_SPI('111111')
```

```
ans =
```

```
1
```

```
>> obj.Send_SPI('000000')
```

```
ans =
```

```
1
```

```
>> obj.Disconnect
```

```
>>
```