

# **Switch Configuration**

Window	Model Name	Frequency	Description
1	MSP2TA-18XL+	DC to 18 GHz	SPDT Switch (Absorptive)
2	MTS-18XL+	DC to 18 GHz	Dual Transfer Switches
3	MSP2TA-18XL+	DC to 18 GHz	SPDT Switch (Absorptive)

Refer to <a href="www.minicircuits.com">www.minicircuits.com</a> for full switch component specifications

## **Mechanical Specifications**

Dimensions	8.25" (w) x 4.25" (h) x 8.25" (d); mounting feet add 0.28" height		
Case Material	Aluminum (with protective coatings to prevent corrosion)		
Case Drawing	99-01-2068		
RF Connectors	SMA female		
Front Panel	a) All RF ports     b) LED switch position indicators		
Rear Panel	<ul> <li>a) Power ON/OFF switch with indicator light</li> <li>b) 2.1 mm center positive DC socket</li> <li>c) 24 V DC Input</li> <li>d) USB &amp; RJ45 control connections</li> </ul>		
Control Interface	USB and Ethernet TCP/IP supporting HTTP and TELNET protocols		
Power Supply	24V DC input (using provided AC/DC adapter)		
Operating Temperature	0° to +50° C		

### **Included Accessories**

Model Name	Quantity	Description
CBL-3W1-xx*	1	AC power cord
AC/DC-24-3W1	1	AC / DC adapter
USB-CBL-AB-7+	1	USB cable (6.8 ft)
CBL-RJ45-MM-5+	1	Ethernet cable (5 ft)

<sup>\*</sup>Please specify one option on the purchase order, at no charge

Cable Model	Region
CBL-3W1-US	USA
CBL-3W1-EU	Europe
CBL-3W1-IL	Israel
CBL-3W1-UK	UK
CBL-3W1-AU	Australia / China

Contact testsolutions@minicircuits.com for more information



# **Multi-Function Switch System**

**RCM-205** 

### **Software Specifications**

#### **Software & Documentation Download:**

- Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from https://www.minicircuits.com/softwaredownload/ztm\_rcm.html
- Please contact <u>testsolutions@minicircuits.com</u> for support

#### **Minimum System Requirements:**

Parameter	Requirements			
Interface	USB HID & Ethernet (HTTP & Telnet)			
	GUI	Windows 98 or later		
0	USB API DLL	Windows 98 or later and programming environment with ActiveX or .NET support		
System Requirements	USB Direct Programming	Linux; Windows 98 or later		
	Ethernet	Windows, Linux or Mac computer with a network port and Ethernet TCP / IP support		
Hardware	Pentium II or later with 256 MB RAM			

#### **Application Programming Interface (API)**

#### **Ethernet Support:**

- Simple ASCII / SCPI command set for attenuator control
- · Communication via HTTP or Telnet
- Supported by most common programming environments

#### **USB Support (Windows):**

- · ActiveX COM DLL file for creation of 32-bit programs
- .NET library DLL file for creation of 32 / 64-bit programs
- Supported by most common programming environments (refer to application note <u>AN-49-001</u> for summary of supported environments)


#### **USB Support (Linux):**

Direct USB programming using a series of USB interrupt codes


Full programming instructions and examples available for a wide range of programming environments / languages.

### **Case Drawings**


Rear Panel

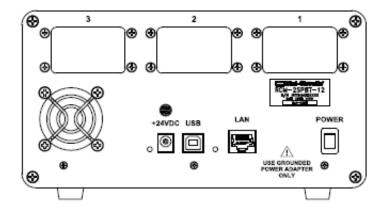

Front Panel (SP8T Switch Options)

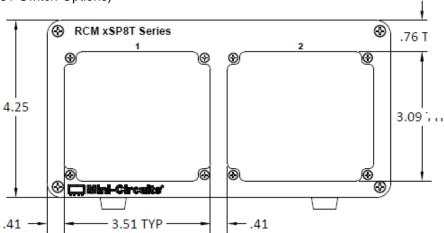

Front Panel (SPDT, SP4T, SP6T & Transfer Switch Options)

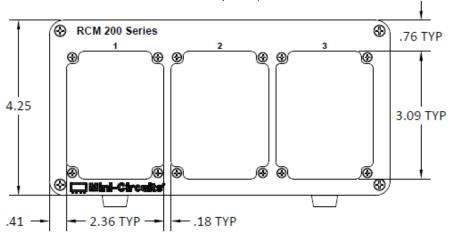



# **Case Drawings**


Bottom, Side & Top Panels 4X #6-32 UNC-2B MAX THREAD PROTRUSION INTO CASE = .375" D ⊚ ⊚


# **Case Drawings**

 
#### Switch Window Options

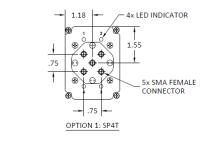


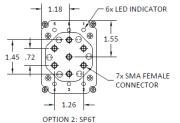




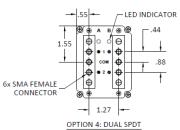

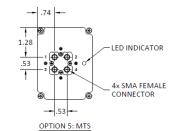

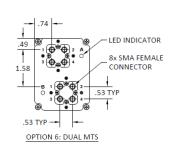

#### AC / DC Power Adapter

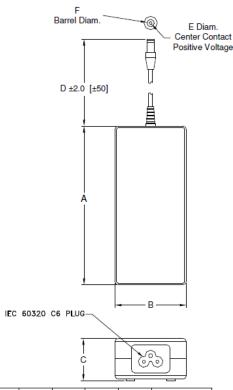

9x SMA FEMALE CONNECTOR

OPTION 1: SP8T

CASE#	A	В	C	D	Е	F	WT. GRAMS
LR1590	4.72 (120)	2.13 (54)	1.26 (32)	72.8 (1850)	0.083 (2.1)	0.217 (5.5)	220