
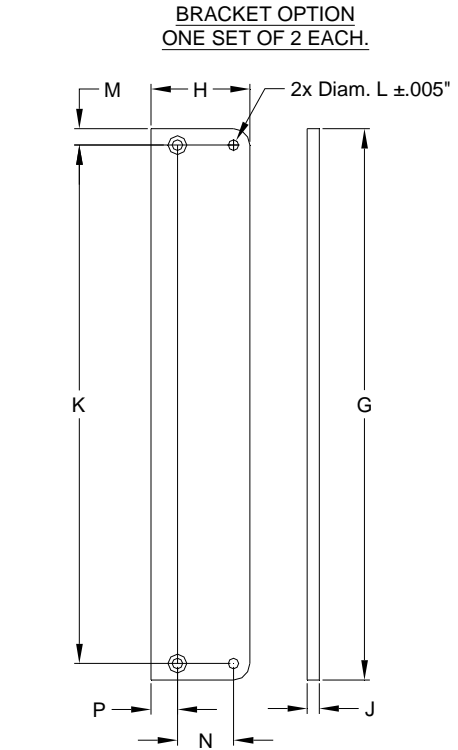


# Case Style



# LV

## Outline Dimensions

## LV1913

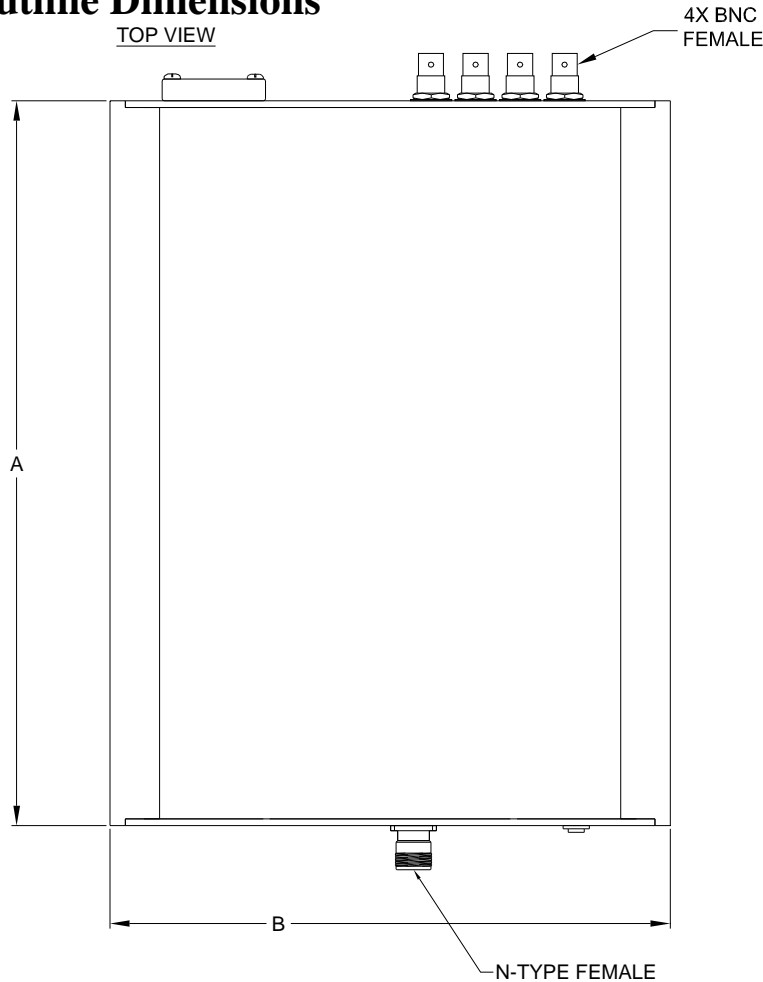

INSTRUCTION FOR MOUNTING BRACKETS:  
 TOOL REQUIRED: PHILLIPS HEAD SCREW DRIVER  
 STEP 1: REMOVE RUBBER FEET FROM THE BOTTOM OF THE UNIT.  
 DO NOT DISCARD THE FASTENERS.  
 STEP 2: MOUNT THE BRACKETS WITH THE FASTENERS REMOVED IN STEP 1, USING THE COUNTER BORE HOLES IN THE BRACKET.

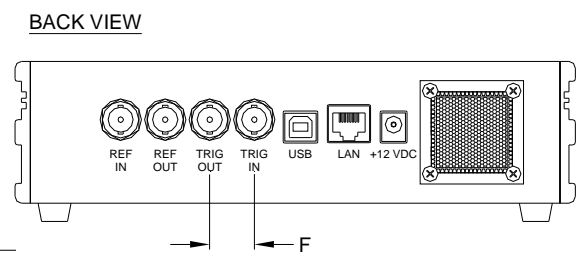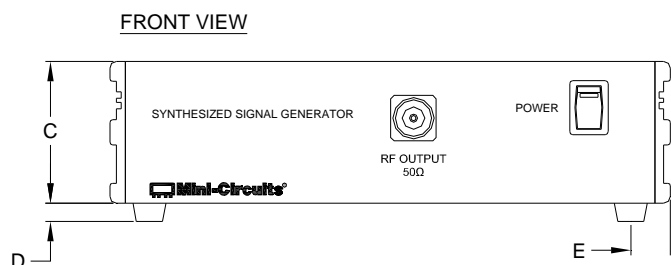

CASE#	A	B	C	D	E	F	G	H	J	K	L	M	N	P	WT. GRAMS
LV1913	11.00 (279.4)	8.50 (215.9)	2.15 (54.6)	.28 (7.1)	.60 (15.2)	0.68 (17.27)	8.37 (212.6)	1.50 (38.1)	.18 (4.6)	7.870 (199.9)	.158 (4.0)	.25 (6.35)	0.850 (21.6)	0.40 (10.2)	3200

Dimensions are in inches (mm). Tolerances: 2PL. +/- .03; 3PL. +/- .015

### Notes:

1. Case material: Aluminum.

**Mini-Circuits**<sup>®</sup> INTERNET <http://www.minicircuits.com>  
 P.O. Box 350166, Brooklyn, New York 11235-0003 (718) 934-4500 Fax (718) 332-4661  
 Distribution Centers NORTH AMERICA 800-654-7949 • 417-335-5935 • Fax 417-335-5945 • EUROPE 44-1252-832600 • Fax 44-1252-837010  
 Mini-Circuits ISO 9001 & ISO 14001 Certified