



Outline Dimensions

LM1580

TOP VIEW

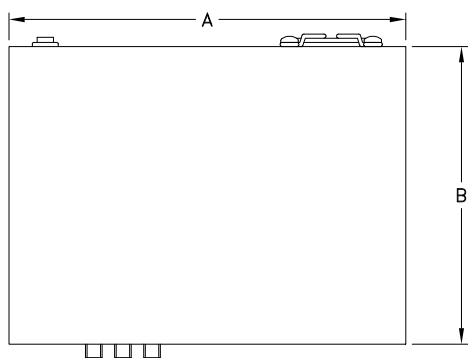


FRONT VIEW

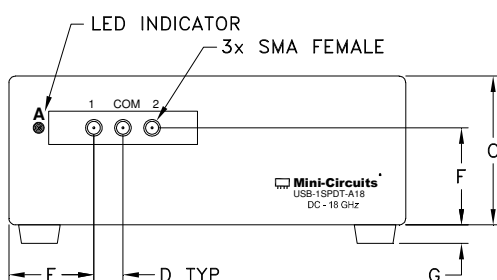


BOTTOM VIEW

Shown with Rubber feet removed
and Brackets Installed.

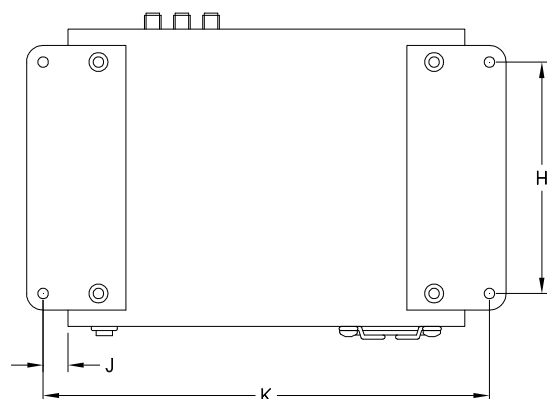


REAR VIEW

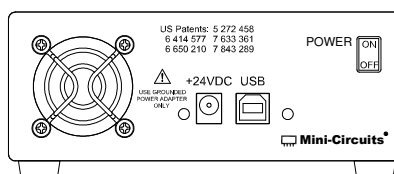

BRACKET OPTION

ONE SET OF 2 EACH.

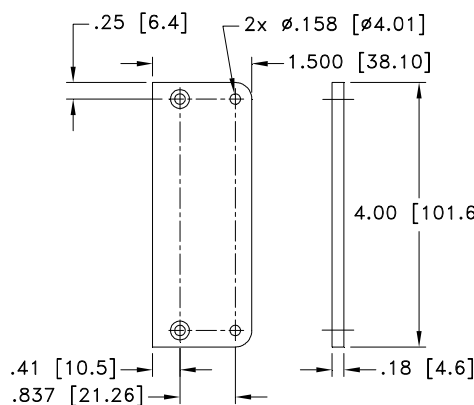

TOLERANCE: $\pm .005$

INSTRUCTION FOR
MOUNTING BRACKETS:

TOOL REQUIRED:

PHILLIPS HEAD SCREW DRIVER

STEP 1: REMOVE RUBBER FEET
FROM THE BOTTOM
OF THE UNIT.
DO NOT DISCARD
THE FASTENERS.

STEP 2: MOUNT THE BRACKETS
WITH THE FASTENERS
REMOVED IN STEP 1,
USING THE COUNTER-
BORE HOLES IN THE
BRACKET.

CASE#	A	B	C	D	E	F	G	H	J	K	WT. GRAMS
LM1580	6.00 (152.4)	4.50 (114.3)	2.25 (57.2)	.440 (11.18)	1.28 (32.5)	1.47 (37.3)	.28 (7.1)	3.500 (88.9)	.375 (9.52)	6.75 (171.4)	875

Dimensions are in inches (mm). Tolerances: 2PL. +/- .03; 3PL. +/- .015

Notes:

1. Case and Bracket material: Aluminum Alloy.
2. Finish: For Case- Powder coating. Color: Blue, For Bracket- Clear Chemical conversion coating.



P.O. Box 350166, Brooklyn, New York 11235-0003 (718) 934-4500 Fax (718) 332-4661 For detailed performance specs & shopping online see Mini-Circuits web site



The Design Engineers Search Engine Provides ACTUAL Data Instantly From MINI-CIRCUITS At: www.minicircuits.com

RF/IF MICROWAVE COMPONENTS