RF Frequency Counter

UFC-6000

1-6000 MHz

The Big Deal

- Wide Frequency Range
- Uses internal or External reference
- Supplied with proprietary GUI software and API objects for programmers.



Included Accessories

Model No.	Description	Qty.
USB-CBI -ΔB-3±	2 7ft LISB cable	1

Typical Applications

- · Labratory test equipment
- High volume production testing / ATE
- · Design verification testing

RoHS Compliant

See our web site for RoHS Compliance methodologies and qualifications

Product Overview

Mini-Circuits' UFC-6000 is a small, light weight Frequency Counter operating over the frequency range 1 to 6000 MHz. The counter is cased in a rugged shielded case (size of 6.16" X 3.68" X 1.38") with a 16x2 character LCD display, a reference input BNC(F) port and a signal input SMA(F) port. Using the USB interface allows remote display of measured frequencies, and eliminates the need for an additional power supply. The counter can also operate independently using an external power supply.

Full software support is provided for USB control, including our user-friendly GUI application for Windows and a full API and programming instructions for both Windows and Linux environments (32-bit and 64-bit systems). The latest version of the full software package can be downloaded from https://www.minicircuits.com/softwaredownload/fc.html at any time. Longer USB cables, AC/DC power adaptor and a mounting bracket are available as additional options - see page 5 for details.

Key Features

Feature	Advantages
Wide frequency range	The UFC-6000 can measure the frequency of a signal from 1 to 6000 MHz
Operates with external or internal reference	The UFC-6000 can operate either synchronized with an external 10 MHz reference signal or independently, using its internal reference depending on user preference.
LCD display	16x2 character LCD display providing the frequency reading, and information on the frequency counter's status.
USB powered	Power to the UFC-6000 is supplied through the USB connector from either the USB bus or the supplied power adaptor with USB connector.

<u>Trademarks:</u> Windows is a registered trademark of Microsoft Corporation in the United States and other countries. Linux is a registered trademark of Linus Torvalds. Pentium is a registered trademark of Intel Corporation. Neither Mini-Circuits nor the Mini-Circuits UFC-6000 frequency counter are affiliated with or endorsed by the owners of the above referenced trademarks

Mini-Circuits and the Mini-Circuits logo are registered trademarks of Scientific Components Corporation.



Electrical Specifications

Parameter	Test Conditions	Min.	Тур.	Max.	Units	
Frequency range	-	1	_	6000	MHz	
	1 - 40 MHz	-	1	_		
Frequency Resolution ¹	40-190 MHz	-	10	-	Hz	
	190-6000 MHz	-	100	-		
	1 - 40 MHz	-	±2	-		
Frequency Accuracy	40-190 MHz	-	±20	-		
(@1 sec measurement sample time) 1, 2	190-1400 MHz	-	±200	-	Hz	
	1400 - 6000 MHz	-	±800	-		
Frequency Aging	Using internal Reference	_	-	±1.0	ppm/year	
Sample time ³	-	0.1	1	3	Sec	
Input Impedance	-	_	50	-	Ω	
1 11/01/10	1 - 1500 MHz	1 - 1500 MHz – 1.1		-	.1	
Input VSWR	1500-6000 MHz	_	1.3	-	:1	
	1 - 5 MHz	-23	-	+13		
Input Power	5 - 4500 MHz	-28 - +13		dBm		
	4500 - 6000 MHz	-15	-	+13		
Reference In Frequency	-	-	10	-	MHz	
Reference In Impedance	-	-	50	-	Ω	
Reference In Power	-	-5	-	+10	dBm	
Supply Voltage	Supplied through the USB port	4.75	5	5.25	V _{DC}	
USB current draw	-	_	275	350	mA	

¹ The Frequency counter's default mode is 'Auto Range' which automatically selects the correct frequency range. When the frequency range is known, the user can improve response time by manually selecting the frequency range by a software function through the GUI interface, or user programming.

Accuracy shown using external 10 MHz reference synchronized to test signal. Using Internal Reference adds 2 ppm of tested frequency to the accuracy values shown.

Software function set by user, default option 1 Sec.

Connections


Reference Input	(BNC-Female)
Signal Input	(SMA-Female)
USB Port	(USB B female)


Absolute Maximum Ratings


Parameter	Ratings
Operating Temperature	0ºC to +50ºC
Storage Temperature	-20°C to +60°C
Max. Supply Voltage (V _{USB})	6 V _{DC}
Max safe input power (Reference input).	+13dBm
Max safe input power (RF in).	+16dBm
DC voltage input (RF in)	±16 V _{DC}


Permanent damage may occur if any of these limits are exceeded. Operating in the range between operating power limits and absolute maximum ratings for extended periods of time may result in reduced life and reliability.


Outline Drawing (LJ1577)

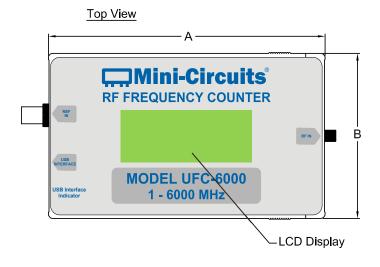

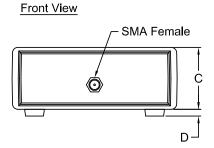

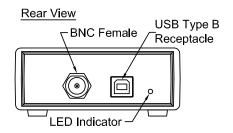

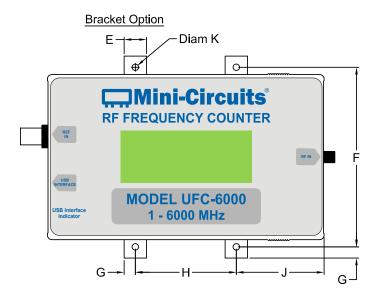



INSTRUCTION FOR MOUNTING BRACKET:

TOOL REQUIRED: PHILIPS HEAD SCREW DRIVER

STEP 1: REMOVE 6 FASTENERS FROM THE BOTTOM OF THE UNIT.

DO NOT DISCARD THE FASTENERS.

STEP 2: MOUNT THE BRACKET WITH THE FASTENERS REMOVED IN STEP 1, USING THE COUNTER BORE HOLES IN BRACKET.

Outline Dimensions (inch)

Α	В	С	D	E	F	G	Н	J	К	L	WT. GRAMS
6.16	3.68	1.38	0.15	0.500	4.000	0.250	2.250	1.96	0.144	0.160	200
156.5	93.4	35.0	3.8	12.7	101.6	6.4	57.2	49.7	3.7	4.1	300

Software & Documentation Download:


- Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from
 - https://www.minicircuits.com/softwaredownload/fc.html.
- Please contact testsolutions@minicircuits.com for support

Minimum System Requirements

Parameter	Requirements		
Interface	USB HID		
	GUI:	Windows 32 & 64 bit systems from Windows 98 up to Windows 10	
System requirements	USB API (ActiveX & .Net)	Windows 32 & 64 bit systems with ActiveX or .Net support from Windows 98 up to Windows 10	
	USB direct programming support	Linux, Windows systems from Windows 98 up to Windows 10	
Hardware	Pentium® II or higher, RAM 256 MB		

Graphical User Interface (GUI) for Windows Key Features:

- · Measure frequency with or without external reference frequency
- Record frequency measurements
- · Set measurement sample time
- Set measurement range (auto or manual range)

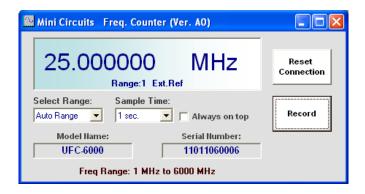

Application Programming Interface (API) Windows Support:

- · API DLL files exposing the full power sensor functionality
 - · ActiveX COM DLL file for creation of 32-bit programs
 - .Net library DLL file for creation of 32 / 64-bit programs
- Supported by most common programming environments (refer to application note <u>AN-49-001</u> for summary of tested environments)

Linux Support:

• Full power sensor control in a Linux environment is achieved by way of USB interrupt commands.

Ordering, Pricing & Availability Information see our web site

Model	Description	
UFC-6000	RF Frequency Counter	

Included Accessories	Part No.	Description
	USB-CBL-AB-3+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)

Optional Accessories	Description
USB-AC/DC-5	AC/DC $5V_{DC}$ Power Adapter with US, EU, IL, UK, AUS, and China power plugs 4
USB-CBL-AB-3+ (spare)	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-AB-7+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-AB-11+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
BKT-300-01+	Mounting Bracket

⁴ Power plugs for other countries are also available, if you need a power plug for a country not listed in the table please contact testsolutions@minicircuits.com for support.

Calibration	Description	
CALUFC-6000	Calibration Service	Click Here

Additional Notes

- A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
- B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions.
- C. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms");

 Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuits' website at www.minicircuits.com/MCLStore/terms.jsp

