



### **Attenuator Configuration**

Window	Model Name	Frequency	Description
1	RUDAT-6000-90	1 MHz to 6000 MHz	Dual Attenuators (90 dB)
2	RUDAT-6000-90	1 MHz to 6000 MHz	Dual Attenuators (90 dB)
3	None	None	Blank Window

Refer to www.minicircuits.com for full switch component specifications

## **Mechanical Specifications**

Dimensions	8.25" (w) x 4.25" (h) x 8.25" (d); mounting feet add 0.28" height			
Case Material	Aluminum (with protective coatings to prevent corrosion)			
Case Drawing	99-01-2068			
RF Connectors	SMA female			
Front Panel	All RF ports			
Rear Panel	<ul> <li>a) Power ON/OFF switch with indicator light</li> <li>b) 2.1 mm center positive DC socket</li> <li>c) 24 V DC Input</li> <li>d) USB &amp; RJ45 control connections</li> </ul>			
Control Interface	USB and Ethernet TCP/IP supporting HTTP and TELNET protocols			
Power Supply	24V DC input (using provided AC/DC adapter)			
Operating Temperature	0° to +50° C			

### **Included Accessories**

Model Name	Quantity Description		
CBL-3W1-xx*	1	AC power cord	
AC/DC-24-3W1	1	AC / DC adapter	
USB-CBL-AB-7+	1	USB cable (6.8 ft)	
CBL-RJ45-MM-5+	1	Ethernet cable (5 ft)	

<sup>\*</sup>Please specify one option on the purchase order, at no charge

Cable Model	Region
CBL-3W1-US	USA
CBL-3W1-EU	Europe
CBL-3W1-IL	Israel
CBL-3W1-UK	UK
CBL-3W1-AU	Australia / China

Contact testsolutions@minicircuits.com for more information



# **Multi-Channel Attenuator System**

**RCM-100** 

### **Software Specifications**

#### **Software & Documentation Download:**

- Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from https://www.minicircuits.com/softwaredownload/ztm rcm.html
- Please contact testsolutions@minicircuits.com for support

#### **Minimum System Requirements:**

Parameter	Requirements			
Interface	USB HID & Ethe	ernet (HTTP & Telnet)		
	GUI	Windows 98 or later		
0	USB API DLL	Windows 98 or later and programming environment with ActiveX or .NET support		
System Requirements	USB Direct Programming	Linux; Windows 98 or later		
	Ethernet	Windows, Linux or Mac computer with a network port and Ethernet TCP / IP support		
Hardware	Pentium II or later with 256 MB RAM			

#### **Application Programming Interface (API)**

#### **Ethernet Support:**

- Simple ASCII / SCPI command set for attenuator control
- · Communication via HTTP or Telnet
- Supported by most common programming environments

#### **USB Support (Windows):**

- · ActiveX COM DLL file for creation of 32-bit programs
- .NET library DLL file for creation of 32 / 64-bit programs
- Supported by most common programming environments (refer to application note <u>AN-49-001</u> for summary of supported environments)


#### **USB Support (Linux):**

Direct USB programming using a series of USB interrupt codes


Full programming instructions and examples available for a wide range of programming environments / languages.

### **Case Drawings**


Rear Panel

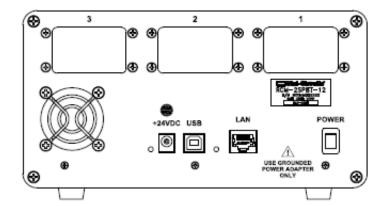

Front Panel (SP8T Switch Options)

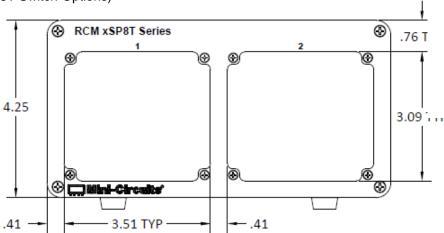

Front Panel (SPDT, SP4T, SP6T & Transfer Switch Options)

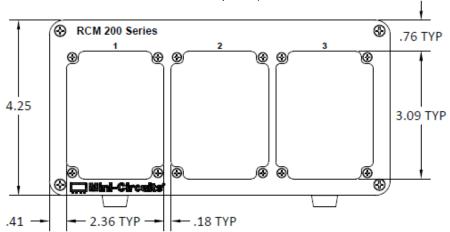



### **Case Drawings**


Bottom, Side & Top Panels 4X #6-32 UNC-2B MAX THREAD PROTRUSION INTO CASE = .375" D ⊚ ⊚


# **Case Drawings**


#### Switch Window Options

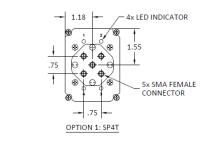


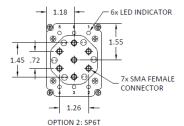

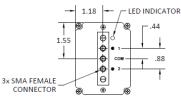


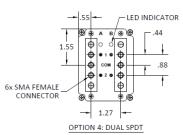

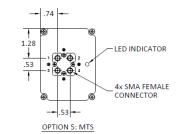

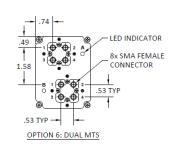

#### AC / DC Power Adapter

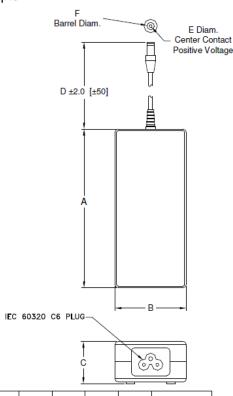

1 1
88
36
9x SMA FEMALE _ ⊗
CONNECTOR OF THE CONNECTOR
1000 10
1 1 36 36
.88 .36 .0 4 4 .0 1
<del></del>
.36 → - 8x LED INDICATOR
→ 88 -

OPTION 1: SP8T

CASE#	Α	В	C	D	Е	F	WT. GRAMS
LR1590	4.72 (120)	2.13 (54)	1.26 (32)	72.8 (1850)	0.083 (2.1)	0.217 (5.5)	220